

# Instruction

version 1.0 dated 10.10.2007


## ZAA 2300 transport arrangements

- ❶ never ship the unit with mounted weight
- ❶ store this instruction together with the original packaging
- ❶ the apparatus has to be transported in the original packaging
- ⚠ All warranty and liability claims for damages will be refused if the instructions for the transport arrangements have not been observed.


Demounted nominal condition before and after transport:



Material for mounting / demounting:

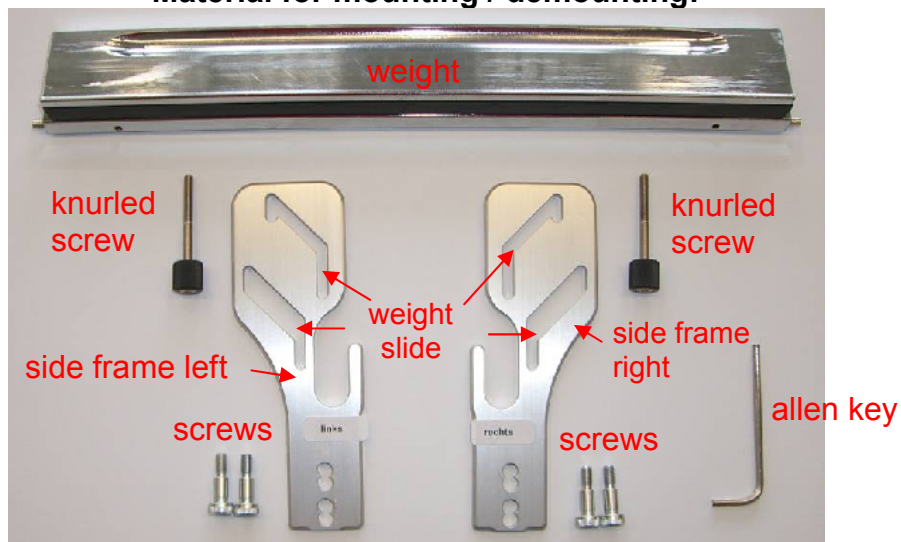


Mount the left side frame on the ZAA 2300 as shown below. Usually, the screws have to be inserted in the top cut out diameters, tighten them using the allen key. (The bottoms cut out diameter are prepared for applications using wire or profiled applicators at substrates with film thickness as from 5 mm.)

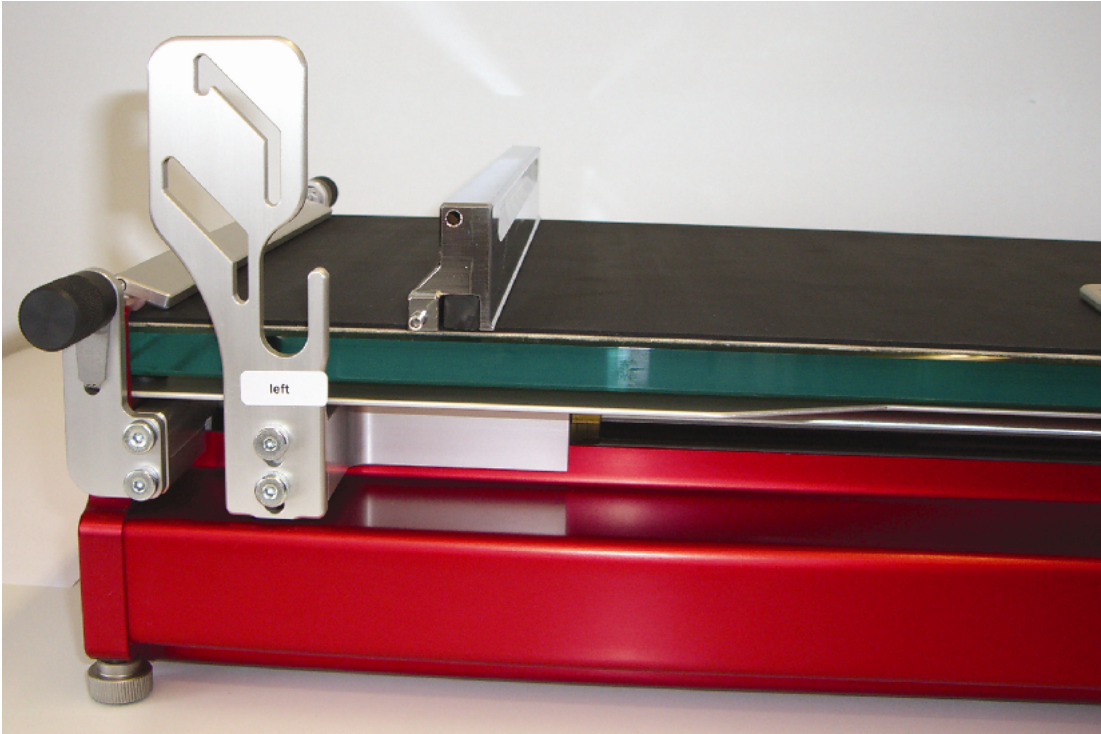

Afterwards put the weight into the weight slide at the left side frame and fix it with the knurled screw.

Place the right side frame to the ZAA 2300 so that the weight will fit into the weight slide, fix it with the knurled screw and afterwards fix the right side frame in the same way as the left side frame.

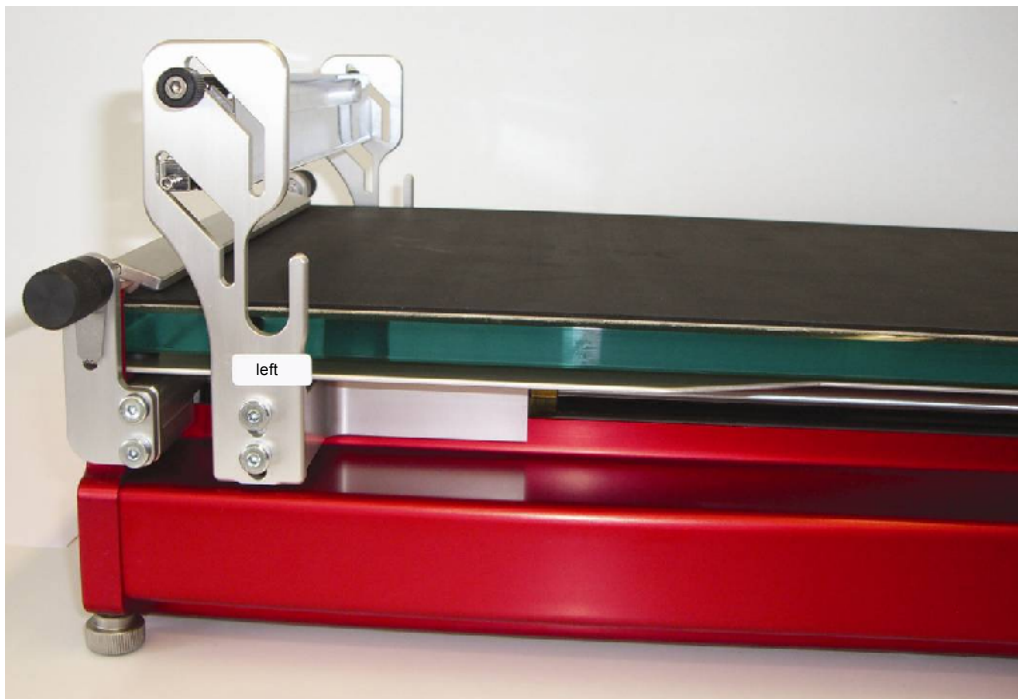

- **For remounting proceed in reversed order.**